

How to make a Ride Custom Back Pattern




1. Remove the inner shell from the outer.

2. Remove the outer cover, turn inside out.



3. Get a large piece of paper or cardboard. It is OK to tape pieces together. Label with the Client Name, Back Serial # and Supplier Information. Lay the cover inside out flat on the paper and trace the perimeter.

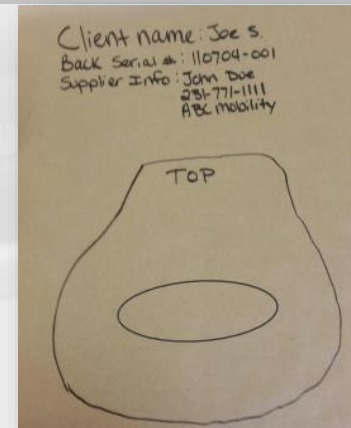

4. Mark which end is the top and draw an approximation of the location and size of the opening cover. Screw holes will need to be added in the field upon installation.