

► **Ride Designs®**
 a branch of Aspen Seating, LLC
 8100 SouthPark Way, C400
 Littleton, Colorado 80120 USA
 toll-free: 866.781.1633
 phone: 303.781.1633
 www.ridedesigns.com


FlexLoc® Adapter Plate Kit

For installation of FlexLoc hardware onto wheelchairs without round back canes



Contents:

- 1 4mm allen wrench
- 1 2.5mm allen wrench
- 1 10mm open end wrench
- 1 Panel mounting screws and nuts
- 1 Permobil® 3 G screws and washers
- 1 Invacare® channel nuts and screws*

Typical Surface Mounting

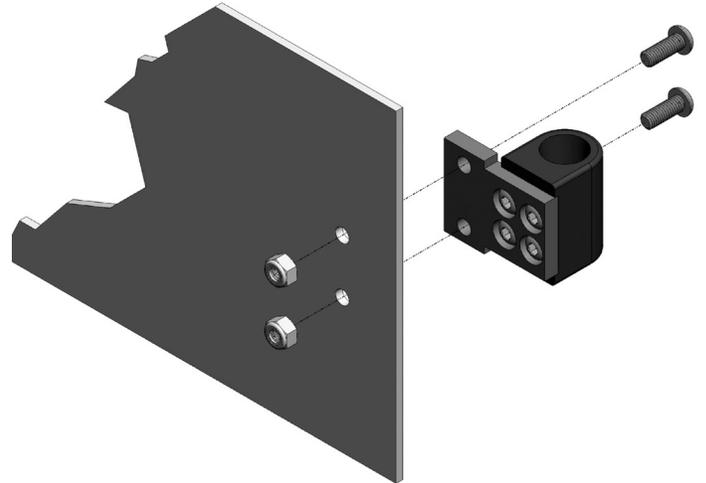

Permobil 3 G

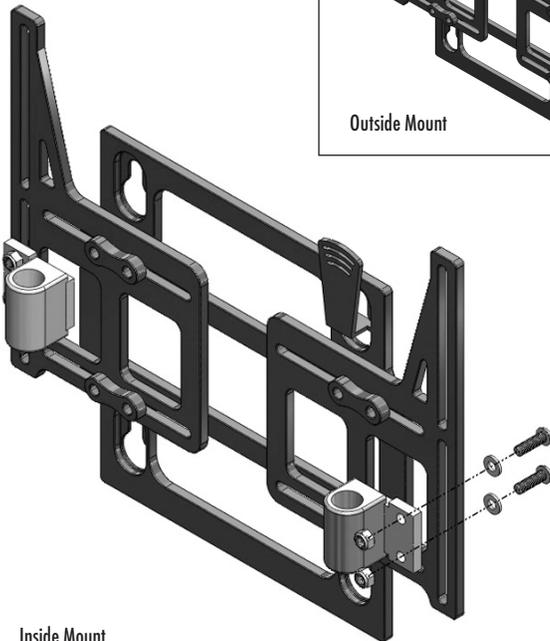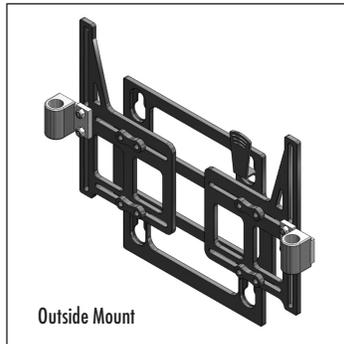

Invacare Channel Nut Slot

***IMPORTANT:**
 The Invacare channel nuts will only be included if an Invacare wheelchair was specified on the Order Form Face Sheet or if they were specifically requested.

